

GB1

► User manual



PMR446 TRANSCEIVER |





Radio Communications Supply &
Installation Specialist

Website:

www.radiotronics.co.uk

Email:

sales@radiotronics.co.uk

Telephone:

0871 288 2816

Instruction Manual for:

Midland GB1 PMR446 Radio

Index

Content of the packaging	3
Coverage/range	3
Warnings	3
Main features	4
Programming software (optional)	4
Description of the controls	5
Display	5
Radio (Front side)	6
Rear side	7
Microphone	7
Functions	8
Turning on/off	8
Channel selection	8
Transmission and reception	8
'FLIP' function	8
Monitor	9
Reset	12
Technical specifications	13
RTTE	17

MIDLAND GB1 is an extremely compact PMR446 mobile transceiver designed for mounting in modern vehicles with limited space. GB1 is free use in almost all European countries.

Content of the packaging

- MIDLAND GB1 transceiver
- Mounting bracket
- Antenna with cable
- Microphone
- Microphone holder
- Screws
- Cigarette lighter power cable

Coverage/range

The maximum range depends on terrain condition and is obtained during use in an open space.

The only limitation to maximum possible range are environmental factors such as blockage caused by trees, buildings, or other obstructions. Inside a car or a metallic constructions, the range can be reduced. Normally the coverage in the city, with buildings or other obstructions is about 1 or 2 Km. In open space but with obstructions like trees, leaves or houses the maximum possible range is about 4-6 Km. In open space, without obstructions and in sight, like for example in mountain, the coverage can be more than 12 Km.

Warnings

Do not open the radio for any reason! The radio's precision mechanics and electronics require experience and specialized equipment; for the same reason, the radio should under no circumstances be realigned as it has already been calibrated for maximum performance. Unauthorized opening of the transceiver will void the warranty.

Main features

- Power: 500mW
- Operating temperature: from -20° to +55°C
- Flip function
- 50 CTCSS tones and 104 DCS codes (normal) + 104 DCS codes (inverted) that can be enabled through the optional programming software
- Monitor function
- SCAN function

Programming software (optional)


Thanks to the programming software PRG-GB1, it is possible to increase the performance of your radio or to reduce its functionality by disabling some of the default features (CTCSS, TOT...).

For further information, please consult the Programming software manual.

Any attempt to change frequencies or output power of the radio invalidates the approval.


Description of the controls

Display

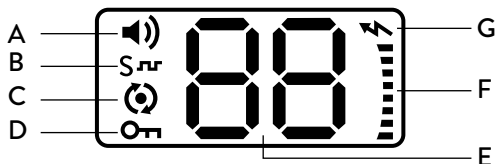


- A This icon appears when the radio receives a signal or when the squelch is opened;
- B Indicates a CTCSS tone or DCS code activated on the selected channel;
- C Indicates that the selected channel is included in the list of channels to be scanned (only the first 8 channels are enabled by default). To enable/disable some channels to the scan list, see paragraph "Scan".
- D Keypad lock; only **▲/▼ buttons** are active.
- E These digits show the selected channel;
- F This icon appears when the radio receives a signal or when it's transmitting;
- G Transmission mode.

Radio (Front side)

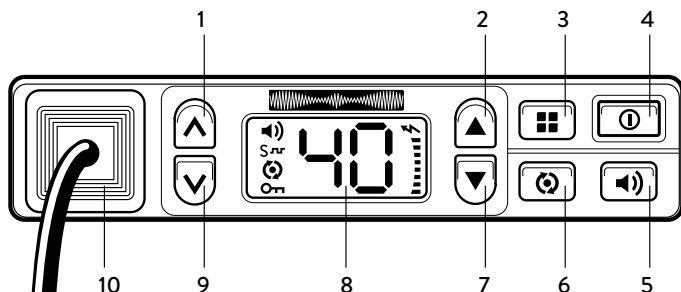


- 1-9 **▲/▼ buttons**; to increase / decrease the volume level (from 0 to 15). Press to select the desired audio level.
- 2-7 **Channel ▲/▼**: to select the desired channel (from 01 to 99).
- 3 **Menu**: push this button to enter the functions **Menu** (from F1 to F5) where you can change the radio parameters. Press **Menu** and select the desired function with the **▲/▼** buttons. Confirm by pushing again **Menu** and select the desired level with **Channel ▲** or **Channel ▼**.
- 4 **On/Off**: press this key to switch on or off the unit.
- 5 **Monitor**: this button suppresses noises on free channels and allows to receive even weak signals.
- 6 **Scan**: push this button to start/stop the channel scan. The scan can be done on the channels enabled to the scan and will stop when a signal is detected and starts again after 4 seconds if the signal disappears.
- 8 **LCD display**
- 10 **RJ mike connector**: connect the microphone or the optional programming cable to this jack.

Rear side

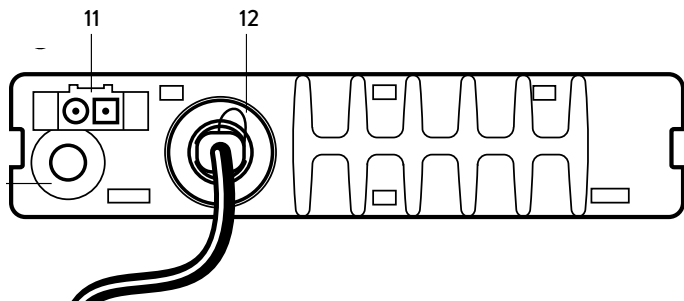

- 11 Power supply connector
- 12 Antenna cable
- 13 EXT SPK jack: you can connect an external speaker to this jack (3.5mm). In this case the internal speaker is automatically excluded.

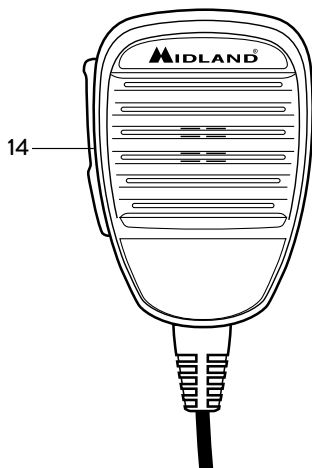

Microphone

- 14 PTT: press to transmit

Functions

Turning on/off

Press **ⓘ** to turn on/off the unit. When the radio is turned on, you can press this button to adjust the backlight (6 levels available).

Channel selection

Select the desired channel with the **▲/▼** buttons.

If you hold down the **▲/▼** buttons for 2 seconds, the channels will scroll quickly upwards or downwards.

Transmission and reception

Select the desired channel

Press the **PTT** button on the microphone and speak with a normal tone of voice to the microphone

To receive, release the **PTT**.

'FLIP' function

Thanks to this function, the unit can be mounted with the speaker facing up or down; the display can read in either orientation.

To activate this function, keep pressed **▼** while turning on the radio: the LCD display will flip by 180°. Hold down **▲** while turning on the radio to restore to normal position.

Menu

In the functions **Menu** it is possible to change the radio's parameters. Press the **Menu** button and select the desired function (from F1 to F5) by using the ▲ or ▼ keys. Confirm by pressing **Menu** again and select the desired value with the ▲ or ▼ buttons.

The functions menu is composed of the following 5 options listed here below:

- F1 CTCSS** (subaudio tones): you can select the desired CTCSS tone; you can choose amongst 50 different tones from 67Hz to 254,1Hz. If you select '**OF**' the CTCSS tone is disabled.
- F2 DSC codes**: the codes available are from 1 to A4. If you select '**OF**' the DCS code is disabled.
- F3 SQUELCH LEVEL**: it allows to select the squelch threshold level (from 0 to 9. 0 = no squelch threshold). To open the squelch and disable a threshold previously set, press **⏏**.
- F4 KEYPAD BEEP**: whenever a key is pressed the radio will emit a beep tone. If it's too loud or too soft for you, it can be adjusted with 9 different levels between b0 and b8. b0 = no beep.
- F5 RF POWER**: to select the tx power level. Two levels are available: **HI** (high) and **LO** (low). This menu is active only in the export version.

 *If you hold down the **Menu** button for 3 seconds, you will enable the keypad lock; the display shows **o** and only ▲ and ▼ keys will be active.*

To disable the keypad lock push the Menu button again for 3 seconds.

Monitor

This function allows to temporarily open the squelch so as to listen to signals that are too weak to be received. Briefly press **⏏** to open the squelch. This key also excludes the CTCSS and DCS tones programmed on that channel.

Scan

The channel scan starts or is interrupted with the  **Scan key**. The scanning will be done on the channels enabled for it, it will stop when a signal is found and will automatically resume after 4 seconds if the channel is clear again. By default only the first 8 channels are scanned; to remove a channel from this list, select the desired channel and then keep pressed the  **Scan key** for 2 seconds.

The  icon will disappear from the display. To add again the channel to the scan list, hold down the  **Scan key** for 2 seconds; the display will show again the  icon.

CTCSS TONES

01	67.0	11	94.8	21	131.8	31	171.3	41	203.5
02	69.3	12	97.4	22	136.5	32	173.8	42	206.5
03	71.9	13	100.0	23	141.3	33	177.3	43	210.7
04	74.4	14	103.5	24	146.2	34	179.9	44	218.1
05	77.0	15	107.2	25	151.4	35	183.5	45	225.7
06	79.7	16	110.9	26	156.7	36	186.2	46	229.1
07	82.5	17	114.8	27	159.8	37	189.9	47	233.6
08	85.4	18	118.8	28	162.2	38	192.8	48	241.8
09	88.5	19	123.0	29	165.5	39	196.6	49	250.3
10	91.5	20	127.3	30	167.9	40	199.5	50	254.1

DCS CODES

01	023	19	116	37	225	55	325	73	452	91	627
02	025	20	122	38	226	56	331	74	454	92	631
03	026	21	125	39	243	57	332	75	455	93	632
04	031	22	131	40	244	58	343	76	462	94	654
05	032	23	132	41	245	59	346	77	464	95	662
06	036	24	134	42	246	60	351	78	465	96	664
07	043	25	143	43	251	61	356	79	466	97	703
08	047	26	145	44	252	62	364	80	503	98	712
09	051	27	152	45	255	63	365	81	506	99	723
10	053	28	155	46	261	64	371	82	516	A0	731
11	054	29	156	47	263	65	411	83	523	A1	732
12	065	30	162	48	265	66	412	84	526	A2	734
13	071	31	165	49	266	67	413	85	532	A3	743
14	072	32	172	50	271	68	423	86	546	A4	754
15	073	33	174	51	274	69	431	87	565		
16	074	34	205	52	306	70	432	88	606		
17	114	35	212	53	311	71	445	89	612		
18	115	36	223	54	315	72	446	90	624		

Reset

With this function all settings will return to the default settings.

Keep pressed **▲** and turn on the radio; release the button after you hear the beep tones.

Technical specifications

General	
Frequency range	446.00625- 446.09375 MHz (PMR446)
Working temperature	-20°/+55° C
Operating voltage	12Vdc $\pm$ 10%
Operate mode	Simplex
Dimensions	100x85x22mm
Weight	220g
Antenna impedance	50 Ω
Duty cycle	5/5/90%
Category	B
Transmitter	
Frequency stability	$\pm$ 2.5PPM
Output power	$\leq$ 500mW ERP
Max frequency deviation	$\leq$ 2,5KHz
Audio distortion	$\leq$ 3%
Adjacent channel power	< 60 dB
Spurious radiation	Within European legal terms
Occupied bandwidth	Within European legal terms
Receiver	
RF sensibility	<0.5 μ V@20 dB SINAD
Audio distortion	$\leq$ 3%
Audio response	300Hz $\div$ 3KHz
Adjacent channel selectivity	Within European legal terms
Intermodulation rejection	Within European legal terms
Spurious response	Within European legal terms
Blocking	Within European legal terms

Specifications are subject to change without notice.

A readily accessible disconnect device shall be incorporated in the installation wiring. The disconnect device shall disconnect both poles simultaneously.



INFORMAZIONE AGLI UTENTI: Ai sensi dell'art. 13 del decreto legislativo 25 luglio 2005, n.151 "Attuazione delle Direttive 2002/95/CE, 2002/96/CE e 2003/108/CE, relative alla riduzione dell'uso di sostanze pericolose nelle apparecchiature elettriche ed elettroniche, nonché allo smaltimento dei rifiuti". Il simbolo del cassonetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti. L'utente dovrà, pertanto, conferire l'apparecchiatura giunta a fine vita agli idonei centri di raccolta differenziata dei rifiuti elettronici ed elettrotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dismessa al riciclaggio, al trattamento e allo smaltimento ambientalmente compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura. Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative di cui al dlgs. n.22/1997 (articolo 50 e seguenti del dlgs. n.22/1997).

All articles displaying this symbol on the body, packaging or instruction manual of same, must not be thrown away into normal disposal bins but brought to specialised waste disposal centres. Here, the various materials will be divided by characteristics and recycles, thus making an important contribution to environmental protection.



Alle Artikel, die auf der Verpackung oder der Gebrauchsanweisung dieses Symbol tragen, dürfen nicht in den normalen Mülltonnen entsorgt werden, sondern müssen an gesonderten Sammelstellen abgegeben werden. Dort werden die Materialien entsprechend ihrer Eigenschaften getrennt und, um einen Beitrag zum Umweltschutz zu liefern, wiederverwertet.

Todos los artículos que exhiban este símbolo en el cuerpo del producto, en el embalaje o en el manual de instrucciones del mismo, no deben ser desechados junto a los residuos urbanos normales sino que deben ser depositados en los centros de recogida especializados. En estos centros, los materiales se dividirán en base a sus características y serán reciclados, para así poder contribuir de manera importante a la protección y conservación del medio ambiente.

Tous les articles présentant ce symbole sur le corps, l'emballage ou le manuel d'utilisation de celui-ci ne doivent pas être jetés dans des poubelles normales mais être amenés dans des centres de traitement spécialisés. Là, les différents matériaux seront séparés par caractéristiques et recyclés, permettant ainsi de contribuer à la protection de l'environnement.

Όλα τα προϊόντα στα οποία εμφανίζεται το ακόλουθο σύμβολο στο σώμα, τη συσκευασία ή το εγχειρίδιο χρήσης τους, δεν πρέπει να εναποθέτονται στους κοινούς κάδους απορριμάτων αλλά να προσκομίζονται στα ειδικά κέντρα αποκομιδής. Εκεί, τα διάφορα υλικά θα πρέπει να διαχωρίζονται ανάλογα με τα χαρακτηριστικά και τα ανακυκλούμενα υλικά, συμμετέχοντας έτσι ουσιαστικά στην προστασία του περιβάλλοντος.

RTTE

I/RSM	Cte International Srl dichiara che il prodotto è conforme ai requisiti essenziali e alle disposizioni della Direttiva 1999/5/CE. La Dichiarazione di conformità si può scaricare dal sito www.midlandeurope.com
UK/CY/M	Hereby Cte International Srl declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available on the web site www.midlandeurope.com
A/D/CH/FL	Hiermiterklärt Cte International Srl, dass das Produkt die grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 1999/5/EC erfüllt. Die Konformitätserklärung ist unter folgendem Link verfügbar: www.midlandeurope.com
E	CTE International SRL. declara, bajo su responsabilidad, que este aparato cumple con lo dispuesto en la Directiva 99/05/CE, del Parlamento Europeo y del Consejo de 9 de marzo de 1999, transpuesta a la legislación española mediante el Real Decreto 1890/2000, de 20 de noviembre. La Declaración de Conformidad está disponible en www.midlandeurope.com
F/LUX/CH	Par la présente Cte International Srl déclare que le modèle est conforme aux exigences essentielles et autres dispositions pertinentes de la directive 1999/5/EC. La déclaration de conformité est disponible sur le site internet www.midlandeurope.com
P	A CTE INTERNATIONAL declara que este aparelho cumpre com o disposto na Directiva 1999/5/CE do Parlamento Europeu e do Conselho de 9 de Março de 1999, transposta para a legislação nacional pelo Decreto-Lei n.º 192/2000, de 18 de Agosto. A Declaração de Conformidade está disponível no sítio na Internet em www.midlandeurope.com
GR	Με το παρόν, η Cte International Srl δηλώνει ότι το όνομα του μοντέλου συμμορφώνεται ως προς τις βασικές απαιτήσεις και άλλες σχετικές διατάξεις του Κανονισμού 1999/5/EC. Η δήλωση συμμόρφωσης είναι διαθέσιμη στην ιστοσελίδα www.midlandeurope.com
NL	Hierbij verklaard CTE International Srl dat dit model (-naam) voldoet aan de essentiële eisen en andere relevante bepalingen van richtlijn 1999/5/EG. De verklaring van conformiteit is beschikbaar op de website www.midlandeurope.com
BE	CTE INTERNATIONAL Srl verklaart dat het product overeenstemt met de voorschriften en andere bepalingen van de richtlijn 1999/5 EC.

	De conformiteitsverklaring is voorhanden op de website www.midlandeurope.com
PL	CTE International Srl deklaruje, że ten model jest zgodny z wymaganiami zasadniczymi i innymi istotnymi postanowieniami Dyrektywy 1999/5/EC. Deklaracja Zgodności jest dostępna na stronie www.midlandeurope.com
RO	Cte International Srl declara ca acest model este in conformitate cu cerintele esentiale si alte prevederi ale Directivei 1999/5/EC. Declaratia de conformitate este disponibila si pe site-ul www.midlandeurope.com .
BG	С настоящото CTE international Srl декларира, че продукта е в съответствие с основните изисквания и съответните модификации на Директива 1999/5/EC. Декларацията за съвместимост е налична на сайта: www.midlandeurope.com
N	CTE INTERNATIONAL Srl erklærer at produktet er i overensstemmelse med de viktigste kravene og andre relevante betingelser i Direktivet 1999/5/EF. Samsvarserklæringen finnes tilgjengelig på nettstedet www.midlandeurope.com
DK	Hermed erklærer Cte International Srl , at dette apparat er i overensstemmelse med kravene og andre relevante bestemmelser i direktiv 1999/5 / EF. Overensstemmelseserklæringen findes på webstedet www.midlandeurope.com
SE	CTE INTERNATIONAL Srl förkunnar att produkten överensstämmer med de väsentliga kraven och övriga bestämmelser i direktiv 1999/5/EG. Denna försäkrän om överensstämmelse finns på webbplatsen www.midlandeurope.com
FIN	CTE INTERNATIONAL Srl vakuuttaa, että tuote täyttää direktiivin 1999/5/EY asettamat olennaiset vaatimukset ja muut asiaa koskevat määräykset. Vaatimuksenmukaisuusvakuutus on saatavilla www.midlandeurope.com –verkkosivuilla.
HR	Cte International Srl ovime izjavljuje da je ime ovog modela u suglasnosti sa bitnim zahtjevima te ostalim relevantnim odredbama Propisa 1999/5/EC. Ova Izjava o suglasnosti je dostupna na web stranici www.midlandeurope.com .
ES	Käesolevaga kinnitab Cte International Srl selle mudeli vastavust direktiivi 1999/5/EC olulistele nõuetele ja teistele asjakohastele sätetele. Vastavusdeklaratsioon on kättesaadav veebilehel www.midlandeurope.com
LT	CTE International patvirtina, kad šis modelis atitinka visus esminius

Direktivos 1999/5/EC bei su ja susijusių dokumentų reikalavimus. Atitikties deklaracija yra pateikiama internetinėje svetainėje **www.midlandeurope.com**

- LV** CTE INTERNATIONAL Srl deklarē, ka produkts atbilst pamatprasībām un citiem ar to saistītajiem Direktīvas 1999/5/EK noteikumiem. Atbilstības deklarācija ir pieejama mājas lapā: **www.midlandeurope.com**
- SK** Týmto Cte International Srl prehlasuje, že tento názov model je v zhode so základnými požiadavkami a ďalšími príslušnými ustanoveniami smernice 1999/5 / ES. Vyhlásenie o zhode je k dispozícii na webových stránkach **www.midlandeurope.com**
- SL** Cte International Srl deklarira da je ta model skladen z bistvenimi zahtevami in drugimi relevantnimi določili EU direktive 1999/5/EC. Deklaracija o skladnosti je na voljo na spletni strani **www.midlandeurope.com**
- CZ** CTE INTERNATIONAL SRL prohlašuje, že výrobek je v souladu s 1999/5 / ES. Prohlášení o shodě je k dispozici na webových stránkách **www.midlandeurope.com**
- H** Mi, a CTE International Srl. saját felelősségre kijelentjük, hogy ezen elnevezésű termék megfelel az 1999/5/EC alapvető követelményeinek és egyéb releváns előírásoknak. A megfelelőségi nyilatkozat elérhető weboldalunkon a **www.midlandeurope.com** címen.

Prodotto o importato da:

CTE INTERNATIONAL s.r.l.

Via. R.Sevardi 7- 42124 Reggio Emilia Italia

www.cte.it - www.midlandeurope.com

L'uso di questo apparato può essere soggetto a restrizioni nazionali (per l'uso in Italia in modalità PMR446, è richiesta una dichiarazione di possesso come da D.L. 259 del 01/08/03 art. 99 comma 3; All. 25 art. 36 e successivi aggiornamenti) . Prima dell'uso leggere attentamente le istruzioni.

Produced or imported by:

CTE INTERNATIONAL s.r.l.

Via. R.Sevardi 7 42124 Mancasale Reggio Emilia Italy

Imported by:

ALAN - NEVADA UK

Unit 1 Fitzherbert Spur Farlington Portsmouth Hants.

P06 1TT - United Kingdom

www.nevada.co.uk

The use of this transceiver can be subject to national restrictions. Read the instructions carefully before installation and use.

Importado por:

ALAN COMMUNICATIONS, SA

C/Cobalt, 48 - 08940 Cornellà de Llobregat (Barcelona - España)

Tel: +34 902 384878 Fax: +34 933 779155

www.midland.es

El uso de este equipo puede estar sujeto a la obtención de la correspondiente autorización administrativa. Lea atentamente las instrucciones antes de usar el equipo.

Vertrieb durch:

ALAN ELECTRONICS GmbH

Daimlerstraße 1K - D-63303 Dreieich Deutschland

www.alan-electronics.de

Die Benutzung dieses Funkgerätes ist von den landesspezifischen Bestimmungen abhängig. Vor Benutzung Bedienungsanleitung beachten.

WWW.MIDLANDEUROPE.COM |

